


## Air gripper——HFP Series

#### Mechanical parallel style

#### **Compendium of HFP Series**

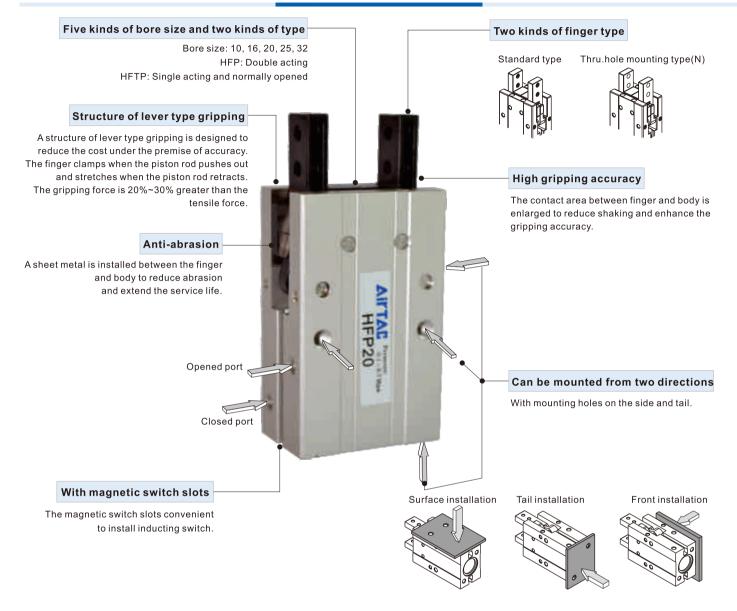

Bore	e size (mm)		10	16	20	25	32						
А	cting type		Double acting, Single acting										
	Fluid		Air(to be filtered by 40 μ m filter element)										
	Double			0.2~0.7MPa(28~100psi)(2.0~7.0bar)									
Operating	acting	Others		0.15~0.7MPa(22~100psi)(1.5~7.0bar)									
pressure	Single acting	Ф10		0.35~0.7MPa(50~100psi)(3.5~7.0bar)									
		Others	0.25~0.7MPa(36~100psi)(2.5~7.0bar)										
Pro	of pressure		1.05MPa(150psi)(10.5bar)										
Tem	perature ℃		-20~70										
Li	ubrication		Cylinder: Not required; Gripper jaws: Lubricate grease										
Max. gripping length [Note1] mm			30	40	60	70	90						
Max. frequency			180(c.p.m) 60(c.p.m)										
Sensor switches [Note2]				CMSG\DMSG(S) CMSG\DMSG(S), CMSH\DMSH(									
Port size			M3×0.5	$3\times0.5$ M5 $\times0.8$									

 $[Note1] \ Refer to \ right graph for the \ definition \ of \ max. \ gripping \ length.$ 

[Note2] Sensor switch should be ordered additionally, please refer to P353 for detail of sensor switch.








#### **HFP Series**




#### Symbol






#### Ordering code

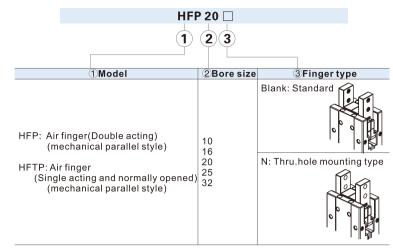

[Note] HFP series are all attached with magnet.

#### Inner structure and material of major parts

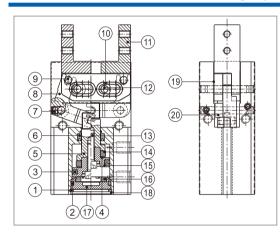


NO.	Item	Material	NO.	Item	Material	
1	C clip	Spring steel 1		Gripping jaws	Stainless steel	
2	O-ring	NBR 12		Pin	Stainless steel	
3	Piston seal	NBR	13	Screw	Carbon steel	
4	Magnet washer	NBR	14	Magnet	Sintered metal (Neodymium-iron-boron)	
5	Piston rod	Aluminum alloy Stainless steel	15	Piston	Aluminum alloy Stainless steel	
6	Rod packing	NBR	16	Bumper	TPU	
7	Countersink screw	Carbon steel	17	Back cover	Aluminum alloy	
8	Curved bar	Stainless steel	18	Body	Aluminum alloy	
9	Pin	Stainless steel	19	Retaining ring	Stainless steel	
10	Guide sleeve	Stainless steel	20	Stopper sleeve	Stainless steel	

#### Installation and application


- 1. Due to the abrupt changes, the circuit pressure is low, which will lead to the decrease of the gripping force and falling of the work-pieces. In order to avoid the harm to the human body and damage to the equipment, anti-dropping device must be equipped.
- 2. Don't use the air gripper under strong external force and impact force.
- 3. When install and fix the air gripper, avoid falling down, collision and damage.
- 4. When fixing the gripping jaw parts, don't twist the gripping jaw.
- 5. There are several kinds of installation method, and the locking torgue of fastening screw must be within the prescribed torque range shown in the below chart. If the locking torque is too large, it will cause the dysfunctional. If the locking torque is too small, it will cause the position deviation and fall.

#### Tail installation type



Bore size	The bolts type	Max. locking moment	Max. screwed depth	The aperture of the positioning bore	The depth of the positioning bore
10	M3×0.5	1.0N.m	6mm	Φ11mm <sup>+0.05</sup>	1.0mm
16	M4×0.7	2.0N.m	8mm	Φ17mm +0.05	1.2mm
20	M5×0.8	4.5N.m	10mm	Φ21mm <sup>+0.05</sup>	1.2mm
25	M6×1.0	7.0N.m	12mm	Ф26mm <sup>+0.05</sup>	1.5mm
32	M6×1.0	7.0N.m	12mm	Ф34mm <sup>+0.05</sup>	1.5mm

#### The installation of the front threaded hole



Bore	The bolts	Max. locking	Max. screwed
size	type	moment(Nm)	depth(mm)
10	M3×0.5	0.7	5
16	M4×0.7	2.0	8
20	M5×0.8	4.5	10
25	M6×1.0	7.0	12
32	M6×1.0	7.0	12

# Surface installation type

Bore size	The bolts type	Max. locking moment (Nm)	Max. screwed depth (mm)
10	M3×0.5	1.0	6
16	M4×0.7	2.0	8
20	M5×0.8	4.5	10
25	M6×1.0	7.0	12
32	M6×1.0	7.0	12

6. Other contents of installation and operation are the same with those of HFZ. Refer to the "Installation and Operation" instruction of HFZ.





#### **HFP Series**

#### How to select product

Please select pneumatic finger according to the following steps:

#### 1)The selection of the effective gripping force


2the confirmation of the gripping point



3the confirmation of the external force put on the gripping jaw


1. The selection of the gripping force

The gripping work-pieces shown below, on the impact condition of ordinary handling state, taking safety coefficient a=4, have a gripping force that is more than 10-20 times of the mass of the gripped objects.




Note) If the friction coefficientµ>0.2, for safety, please also select clamping force according to the principle of 10~20 times of the mass of the clamped objects. As for large acceleration and shock, it requires for greater safety coefficient.


1.1) The actual gripping force must be within the effective gripping forces of different pneumatic fingers specifications shown in the below chart.

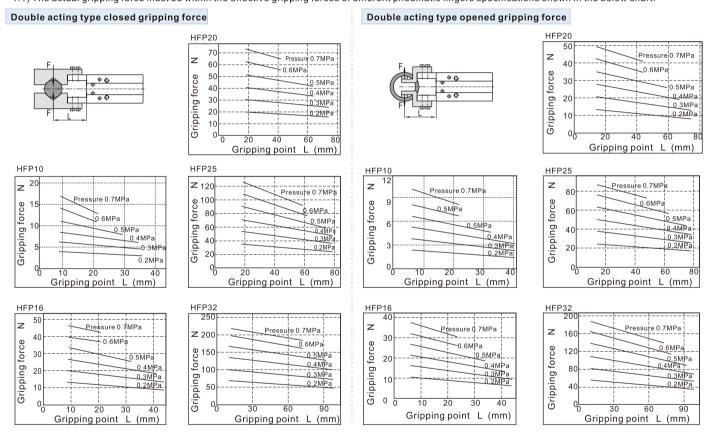


- 2. The selection of the gripping point
  - 2.1) Select the gripping point within the maximum gripping length range. Over the limits, gripping jaws would be subjected to excessive torque loads, and lead to short life of the air gripper.




L and H have proper sizes








- 2.2) In the allowable range of gripping point, it is better to design for short and light fittings. If the fittings are long and heavy, the inertia force when the finger is open and close will become larger, and the performance of gripping jaw will be degraded, at the same time it will affect the life.
- 2.3) When the gripped object is very fine and thin, you have to equip with gap between fittings. If not, there will be unstable clamp, resulting in a position offset and adverse clamping and so on.






### Air gripper(Mechanical parallel style)





#### **HFP Series**


3. The confirmation of the external force put on the gripping jaw.

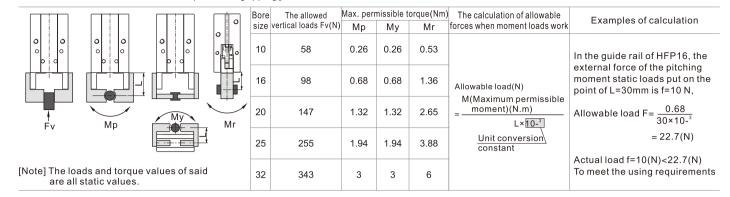



#### **Dimensions**

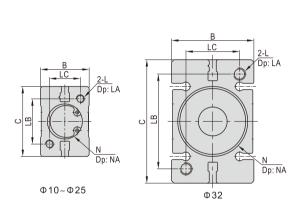



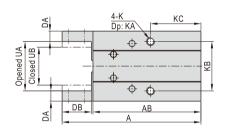



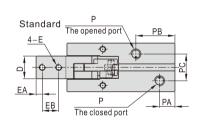

Model\Item		Α	AB		В	С	D	DA	DB	ов Е		EA	ЕВ	F	K	KA	KB	KC	L	LA
HFP10	5	7(62)	44.5(49	.5)	16	23	7	4	12	M2.5 ×	0.45	3	5.5	Ф2.8	$M3 \times 0.5$	5	16	23(28)	M3×0.5	6
HFP16	7	2(77)	56.5(61	.5) 2	23.5	34	11	5	15	M3×	0.5	4	7	Ф3.3	M4×0.7	8	24	29(34)	M4×0.7	8
HFP20	89.	5(94.5)	69(74)	) 2	27.5	45	12	6	20	M4×	0.7	5	9	Φ4.5	$M5 \times 0.8$	10	30	34(39)	$M5 \times 0.8$	10
HFP25	104.	5(109.5	78.5(83	.5) 3	33.5	52	14	8	25	M5×	8.0	6	12	Ф5.5	M6×1.0	12	36	31.5(36.5)	M6×1.0	12
HFP32	11	8(126)	88(96	)	40	60	18	9	29	M6 × 1.0		7	14	Φ6.5	$M6 \times 1.0$	12	46	37.5(45.5)	$M6 \times 1.0$	12
Model\ltem	LB	LC	М	MA	МВ	M	С	MD		N NA			Р	PA	РВ	PC	UA	A(Opened)	UB(Clo	sed)
HFP10	18	12	M3×0.5	6	10	6(1	l1)	10	Ф1′	1 +0.05	1	МЗ	× 0.5	6	16.5(23)	10	)	14.5 <sup>+1.5</sup>	10.5	0
HFP16	22	15	$M4 \times 0.7$	8	16	6(1	l1)	16	Ф17	Ф 17 +0.05		2 M5×0.8		7.5	20(25)	13	3	23.5 +1.5	15.5 .	0
HFP20	32	18	$M5 \times 0.8$	10	18	8(1	(3)	16	Ф2′	Ф21 +0.05		$M5 \times 0.8$		7.5	24(29)	15	5	32.5 <sup>+1.5</sup>	20.5	0
HFP25	40	22	$M6 \times 1.0$	12	24	8(1	(3)	16	Ф26	Ф 26 +0.05		M5×0.8		8	22(29)	20	)	35.5 +1.5	21.5	0 1
HFP32	46	26	M6×1.0	12	30	8(1	(6)	20	Ф34	Ф 34 +0.05		M5	×0.8	9.5	26(37)	22	2	42 +1.5	26.5	0

[Note]The values in "()" in the above table are single acting type sizes.